



Pulliam Pools

Innovating Since 1916

HOW TO WINTERIZE YOUR AUTOFILL



HOW TO WINTERIZE YOUR AUTOFILL

*There are many variations of pool equipment based on time the pool was built and the variety of pool products available in the marketplace. These instructions are for reference and Pulliam Pools is not responsible for any circumstances that result in product damage during the winterizing process or freeze damage.

1

STEP 1

Locate the autofill shutoff in yard. They are typically installed underneath an insulation bag and located near the pool equipment.

2

STEP 2

Lift the insulation bag - exposing the RPZ shutoff valve. Turn all brass handles 90 degrees to shut off water flow.

3

STEP 3

Put the insulation bag back over the rpz unit.

STEP 1

Locate the autofill shutoff in yard. They are typically installed underneath an insulation bag and located near the pool equipment.



STEP 2

Lift the insulation bag - exposing the RPZ shutoff valve. Turn all brass handles 90 degrees to shut off water flow.



STEP 3

Put the insulation bag back over the rpz unit.





WINTERIZING YOUR AUTOFILL