



Pulliam Pools
Innovating Since 1916

HOW TO WINTERIZE YOUR UV SYSTEM





Pulliam Pools

Innovating Since 1916

HOW TO WINTERIZE YOUR UV SYSTEM

1

STEP 1

Turn off all power in the breaker box location at the pool equipment.

2

STEP 2

Identify if pool equipment is above or below pool. If below, turn red or blue shut off valves.

3

STEP 3

Locate UV sanitizer on equipment pad.

4

STEP 4

CMP UV

Disconnect the plumbing connection union at bottom of UV- After, drain the line on bottom of UV .

5

STEP 5

PARAMOUNT UV + A&A DLETA UV

Disconnect the plumbing connection union with a channel lock (20 inches or larger) at bottom of UV.

STEP 1

Turn off all breakers at pool equipment.




STEP 2

Identify if your pool equipment is below or above your pool's water level.



STEP 2

If your pool equipment is below your pool's water level turn all **LARGE red ball valves** off before removing any drain plugs from your equipment.

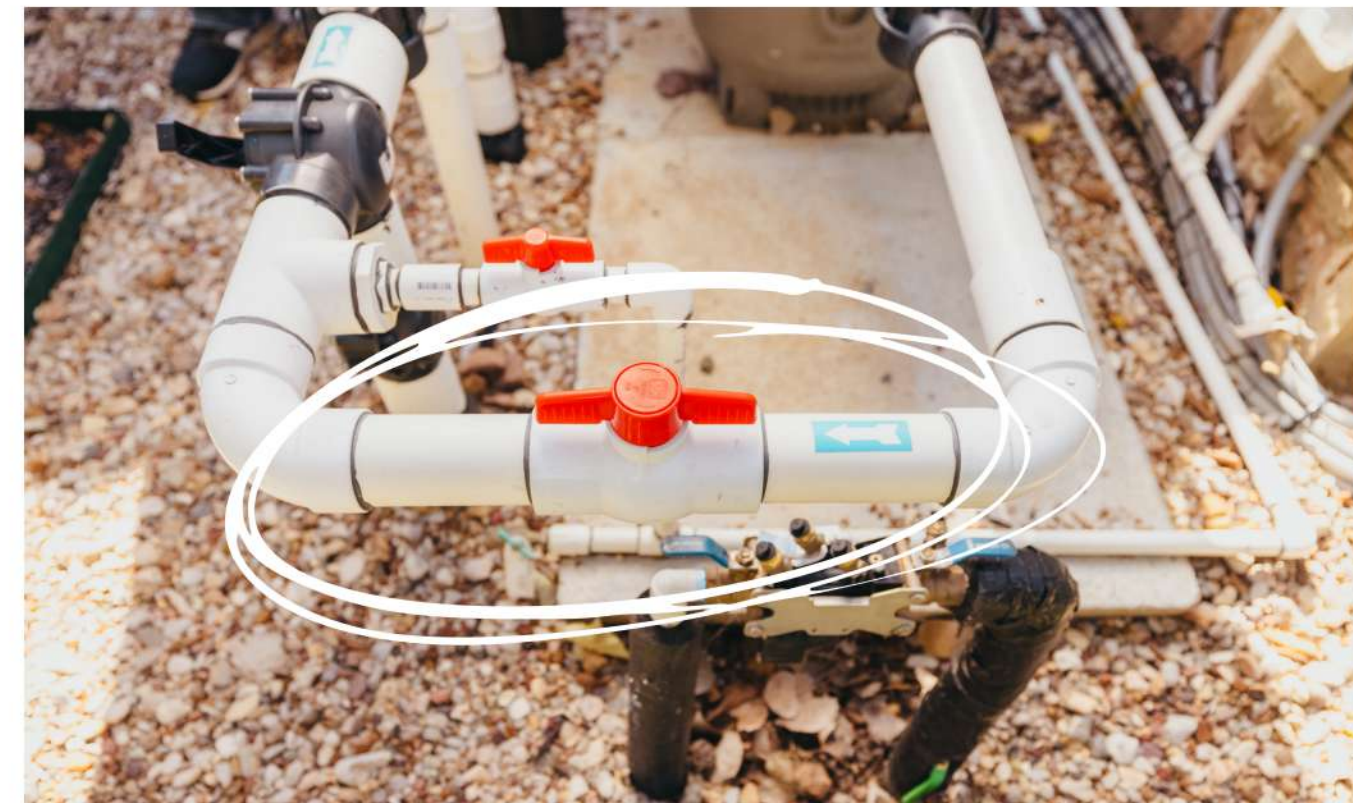


STEP 3

Locate UV sanitizer on equipment pad- You may have one of the three below.



STEP 4

If you have a CMP UV, disconnect the plumbing connection union at bottom of UV- after, drain the line on bottom of UV like the photo below.

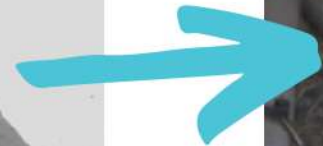

STEP 4

If you have a Paramount or A&A Delta UV disconnect plumbing connection union with a channel lock (20 inches or larger) at the bottom of the UV like the photo below.

Tool Needed:
Channel Lock
(20 inches or larger)





Pulliam Pools

Innovating Since 1916

PULLIAM.COM



WINTERIZING YOUR UV SYSTEM